


GARMIN.

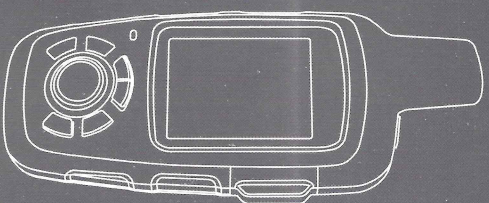

INREACH SE[®] + INREACH EXPLORER[®] +

Quick Start Manual	2
Manuel de démarrage rapide	7
Manuale di avvio rapido	13
Schnellstartanleitung	20
Guía de inicio rápido	26
Manual de início rápido	32

INREACH SE®+ INREACH EXPLORER®+ Quick Start Manual

Getting Started

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Device Overview



NOTE: The device does not charge when it is outside the approved temperature range (page 6).

- 1 Lift the weather cap (1).



- 2 Plug the small end of the power cable into the USB port (2) on the device.
- 3 Plug the other end of the power cable into an appropriate power source.
- 4 Change the device completely.

Keys



- 1 Internal Iridium® antenna
- 2 SOS key (under protective cap)
- 3 Status LED
- 4 Keys
- 5 Power key
- 6 Mounting spine
- 7 Micro USB port (under weather cap)

Turning On the Device

Hold **5**

Charging the Device

NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

Status LED

LED Activity	Status
Flashing green	You have an unread message.
Flashing red	The device does not have a clear view of the sky.
	The device is below 10% battery power.
Alternating red and green	The device is in SOS mode.
Alternating red and green rapidly	The device is canceling an SOS rescue.

Status Icons

3D GPS signal acquired
2D GPS signal acquired
Searching for GPS signal
Sending and receiving data
Unable to send and receive data
Unread messages
Tracking enabled
Bluetooth® technology status
Charging battery
Charging complete

Activating the Device

Before you can use your InReach® device, you must activate it.

- 1 Create an account, and select a satellite subscription at inreach.garmin.com.

2 Turn on the device.

3 Follow the on-screen instructions.

4 When prompted, go outdoors to an open area with a clear view of the sky.

5 Wait while the device communicates with the Iridium satellite network.

NOTE: It may take up to 20 minutes to activate your device. The device must send and receive several messages, which takes longer than sending a single message during regular use.

Iridium Satellite Network

Your device requires a clear view of the sky to transmit messages and track points over the Iridium satellite network. Without a clear view of the sky, your device attempts to send the information until it acquires satellite signals.

TIP: For the best connection with satellites, attach the device to a backpack or to your upper body.

Bluetooth Connected Features

Your device has several Bluetooth connected features for your compatible smartphone or mobile device using the Earthmate® app. The Earthmate app allows you to use InReach features on the larger, higher resolution touchscreen on your mobile device.

Downloadable Features:

View downloaded maps, aerial imagery, USGS quadrangle maps, and NOAA nautical charts on your mobile device. You should download maps and charts before going on your trip.

Messages: Allows you to read and write messages, and access the contacts list on your mobile device. Messages appear on both devices.

NOTE: You can have only one mobile device paired with your InReach device at a time.

Pairing Your Mobile Device

You must pair your InReach device with your mobile device to use Bluetooth features.

- 1 From the app store on your mobile device, install and open the Earthmate app.
- 2 Place the InReach device and your mobile device within 3 m (10 ft.) of each other.
- 3 On the InReach device, select **Settings > Bluetooth > Pair Device > Pair Device**.
- 4 Follow the instructions in the Earthmate app to complete the pairing and setup process.

After the devices are paired, they connect automatically when they are turned on and within range.

Testing the Device

You should test the device outdoors before using it on a trip to ensure your satellite subscription is active.

Select **Test > Test**.

Wait while the device sends a test message. When you receive a confirmation message, your device is ready to use.

Messages

Your InReach device sends and receives text messages using the Iridium satellite network. You can send messages to an SMS phone number, an email address, or another InReach device. Each message you send includes your location details.

Sending a Preset Message

Preset messages are messages that you created at inreach.garmin.com. Preset messages have predefined text and recipients.

- 1 Select **Preset**.

- 2 Choose a preset message, and select **Send**.

Sending a Text Message

- 1 Select **Messages > New Message**.
- 2 Select an option:
 - Select **To:** to enter new recipients.
 - Select ☒ to select recipients from your contacts list.
- 3 Select an option:
 - Select **Message:** to create a new message.
 - Select ☒ to select a quick text message.

- 4 Select **Send Message**.

Replying to a Message

- 1 Select **Messages**.
- 2 Select a conversation.
- 3 Select an option:
 - Select **Type Reply** to create a new message; enter the message, and select **Done**.
 - Select **Quick Reply** to select a quick text message.

Checking for Messages

Your device listens for new messages at regular listen intervals. Satellites announce recently sent messages, and your device receives the message at the next listen interval. The default interval is 10 minutes.

NOTE: Your device must be in view of a satellite at the time of the listen to receive messages.

You can force a check for messages by manually checking for messages, sending a message, or sending a track point.

During a check, your device connects to satellites and receives messages waiting to be sent to your device.

Select **Check > Check Now**.

SOS

During an emergency, you can contact the GEOS International Emergency Rescue Coordination Center (IERCC) to request help. Pressing the SOS key sends a message to the rescue coordination center, and they notify the appropriate emergency responders of your situation. You can communicate with the rescue coordination center during your emergency while you wait for help to arrive. You should only use the SOS function in a real emergency situation.

Initiating an SOS Rescue

NOTE: While in SOS mode, the status bar is red and the device cannot be turned off.

- 1 Lift the protective cap ① from the SOS key ②.



- 2 Hold the SOS key.
- 3 Wait for the SOS countdown.
- 4 The device sends a default message to the emergency response service with details about your location.
- 5 Reply to the confirmation message from the emergency response service.

Your reply lets the emergency response service know that you are capable of interacting with them during the rescue.

For the first 10 minutes of your rescue, an updated location is sent to the emergency response service every minute. To conserve battery power after the first 10

minutes, an updated location is sent every 10 minutes when moving, and every 30 minutes when stationary.

Cancelling an SOS Rescue

If you no longer need assistance, you can cancel an SOS rescue after it is sent to the emergency response service.

- 1 Lift the protective cap, and hold the SOS key.

- 2 Select **Cancel**.

Your device transmits the cancellation request. When you receive a confirmation message from the emergency response service, the device returns to normal operation.

Tracking

Tracking records your path. When you start tracking, your device logs your location and updates the track line on the map at the specified log interval. Your device records track points and transmits them over the satellite network at the specified send interval. You can view the number of track points sent, storage space remaining, and time until the tracking log storage is full.

TIP: You can adjust the tracking log interval and the tracking send interval to maximize battery life.

Starting Tracking

- 1 Select **Tracking > Start**.
- 2 If necessary, select **Share** to send a message that you are tracking.

Navigation

Acquiring GPS Satellite Signals

Before you can use GPS navigation features, you must acquire satellite signals.

- 1 Turn on the device.
- 2 Wait while the device locates satellites.

It may take up to 60 seconds to acquire satellite signals.

3 If necessary, go to an open area, away from tall buildings and trees.

Routes

A route is a sequence of locations that leads you to your final destination. You can create and save routes at inreach.garmin.com.

Navigating a Saved Route

- 1 Select Routes.
- 2 Select a route.
- 3 Select Navigate.

Waypoints

Waypoints are locations you record and store in the device. Waypoints can mark where you are, where you are going, or where you have been.

Creating a Waypoint

You can save your current location as a waypoint.

- 1 Select Waypoints > New Waypoint.
- 2 If necessary, edit the waypoint information.

Navigating to a Waypoint

- 1 Select Waypoints.
- 2 Select a waypoint.
- 3 Select Navigate.

Map

The map page shows your location, sent and received messages, waypoints, and a colored track line connecting your track points. The InReach Explorer™+ map shows streets, points of interest, and topographical information. You can customize the information displayed on the map.

Tip Info

The trip info displays your trip time, time moving, maximum speed, average speed, trip distance, and trip odometer.

Device Information

Support and Updates

Go to inreach.garmin.com for easy access to these services for InReach devices.

- Product registration
- Product manuals
- Firmware updates
- Map downloads and updates
- Data uploads and syncing your device with your account

Getting the Owner's Manual

The owner's manual includes instructions for using device features and accessing regulatory information.

Go to garmin.com/manuals/inreach.

Attaching the Carabiner Clip

- 1 Position the carabiner clip ① in the slots on the mounting spine ② of the device.



- 2 Slide the carabiner clip up until it locks in place.

Removing the Carabiner Clip

Lift up on the bottom of the carabiner clip, and slide the carabiner clip off the mounting spine.

Specifications

Battery type	Rechargeable, built-in lithium-ion battery
Water rating	IEC 60529 IPX7*

Operating temperature range	From -20° to 60°C (from -4° to 140°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)
Wireless frequency/protocol	2.4 GHz @ 3 dBm nominal

*The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to www.garmin.com/waterrating.

Battery Information

The actual battery life depends on your device settings, such as the tracking and message checking intervals.

Battery Life	Mode
Up to 75 hr.	10-minute tracking send interval and 1-second log interval
Up to 100 hr.	Default mode with 10-minute tracking send interval and 1-minute log interval
Up to 30 days	Extended tracking mode with 30-minute tracking send interval
Up to 3 yr.	Turned off

et autres informations importantes sur le produit.

Présentation de l'appareil



①	Antenne Iridium interne
②	Bouton SOS (sous le capot de protection)
③	Voyant DEL d'état
④	Boutons
⑤	Bouton Marche/Arrêt
⑥	Rainure de fixation
⑦	Port micro-USB (sous le capuchon étanche)

Mise sous tension de l'appareil

Maintenez enfoncé le bouton ⑤.

Chargement de l'appareil


AVIS

Pour éviter tout risque de corrosion, essayez soigneusement le port USB, le capuchon étanche et la surface environnante avant de charger l'appareil ou de le connecter à un ordinateur.

REMARQUE : l'appareil ne se charge pas lorsque la température est en dehors de la plage de températures approuvées (page 13).

- 1 Soulevez le cache étanche ①.

GARMIN.

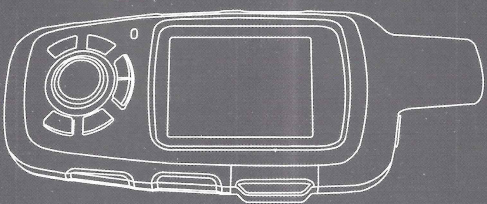

INREACH SE[®] + INREACH EXPLORER[®] +

Quick Start Manual	2
Manuel de démarrage rapide	7
Manuale di avvio rapido	13
Schnellstartanleitung	20
Guía de inicio rápido	26
Manual de início rápido	32